

Application Note 1:

Dynamic voltage adjustment of parallel connected modules.

Parallel connected modules are configured to current share between the each output module. In order to maintain the current sharing when using the Vtrim (voltage trim) function, the following application circuit should be implemented.

